


MINI 8 zum Einkleben (bündig)

Im wesentlichen wie bei Steckbuchse 22 Ø x 23,5 mit folgendem Unterschied: Die Rückwanddicke kann wahlweise 16, 19 mm oder mehr sein. Die Bohrung in der Rückwand beträgt 12 mm. Die Befestigung der Steckbuchse erfolgt mittels Klebstoff.

Steckbuchse 12 Ø x 23,5

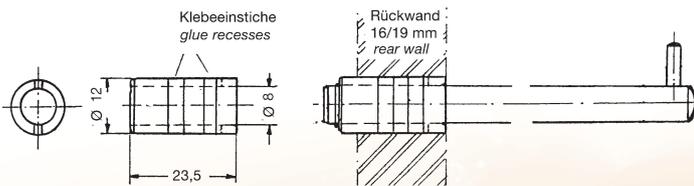

*** Montagehinweis:

1. Buchse entfetten und Bohrloch in der Rückwand reinigen.
2. Buchse mit "Uhu Endfest 300®" dünn bestreichen und zu ca. 2/3 der Buchsenlänge in das Bohrloch stecken
3. mit Montageschlüssel Nuten senkrecht ausrichten und Buchse bündig ins Bohrloch drücken
4. Klebstoff trocknen lassen

MINI 8 for gluing (flush)

Essentially the same as plug socket 22 Ø x 23.5 with the following exception: the wall thickness can be 16 mm, 19 mm or more. the bore diameter is 12 mm. The Plug socket is fixed with glue.

Plug socket 12 Ø x 23.5

B.Nr. 21060

Oberflächen / finishes *

01 Aluminium blank / untreated

*** Assembly:

1. Degrease socket and clean bore.
2. Apply a thin layer of "Uhu Endfest 300(r)" to the socket and push it about 2/3 of the way into the bore hole.
3. Turn the groove with the mounting key until it is vertical and press the socket into the bore until flush.
4. Allow glue to dry.